VISION

VFM-WS

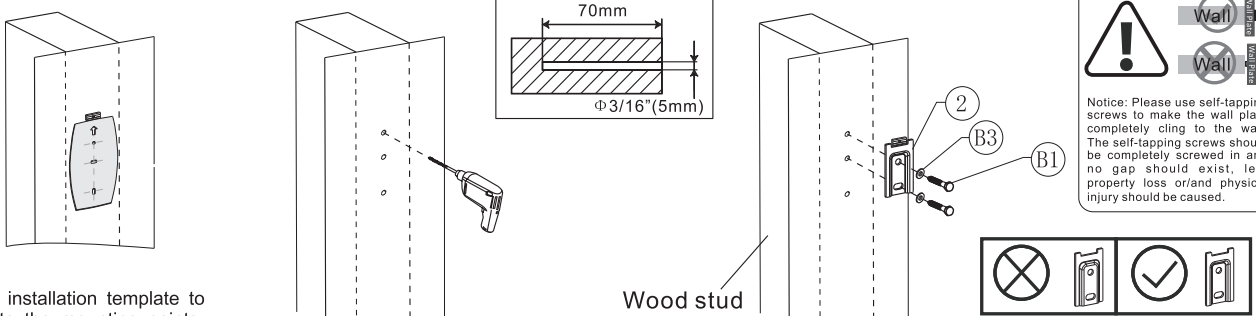| B1	~~~~~ screw	x3	B2	▭ wall plug	x3	B3	○	x3

1-A

Use installation template to locate the mounting points

Concrete Wall

70mm
Φ3/8"(10mm)

B2
B3
B1
②

Notice: Please use self-tapping screws to make the wall plate completely cling to the wall. The self-tapping screws should be completely screwed in and no gap should exist, lest property loss or/and physical injury should be caused.

Wall
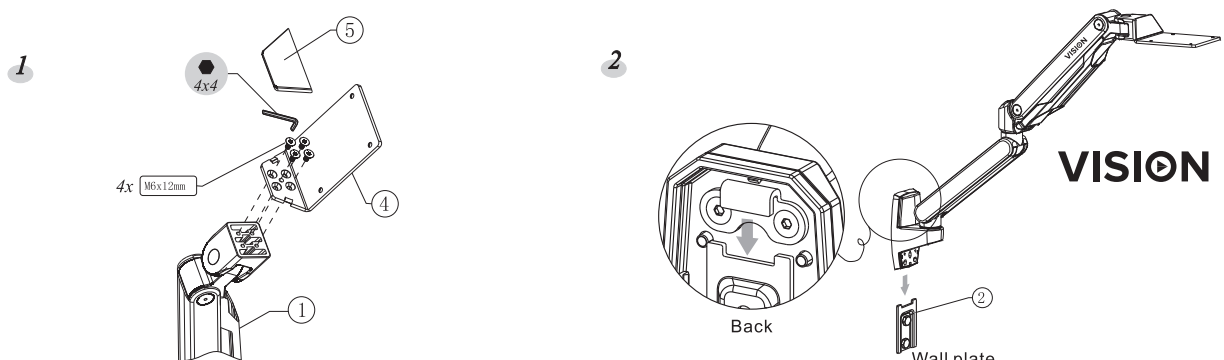Wall

1-B

Use installation template to locate the mounting points

Wood stud

70mm
Φ3/16"(5mm)

②
B3
B1

Notice: Please use self-tapping screws to make the wall plate completely cling to the wall. The self-tapping screws should be completely screwed in and no gap should exist, lest property loss or/and physical injury should be caused.
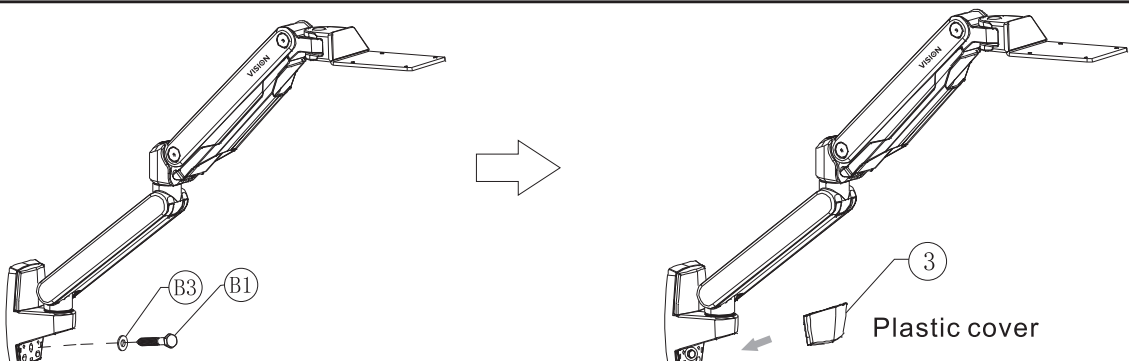
Wall
Wall

2

1

⑤
4x4
4x M6x12mm
④
①

2

Back

Wall plate
②

VISION

3

B3 B1

③ Plastic cover

4

M6x12mm x4

4x4
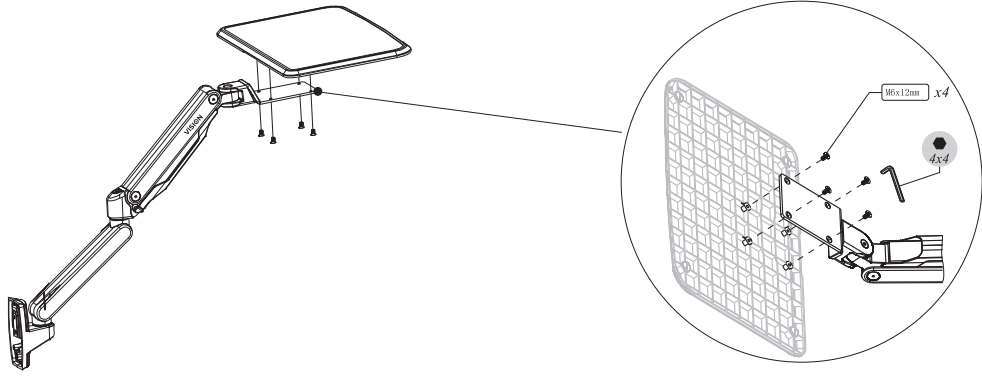
5

1   2   3   4

Cable
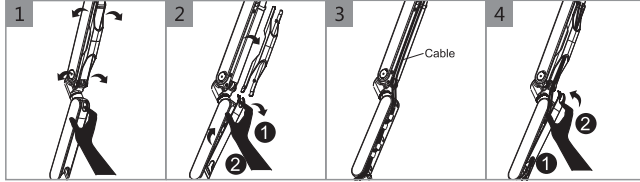
Adjust the monitor's height after installing.If the monitor cannot stop at any height,pls use the supplied 6x6 allen key to adjust the screw on the arm. To make the mount and monitor's weight equal and it can stop at any height,pls adjust the screw in "-"direction when the monitor up and "+" direction when it down.

±90°

6x6

Cable

±135°

±180°